


## “ O P T I O N A L ” S O L A R P A N E L

If you use Elite's optional solar panel (Elite Part # **Solar 3**). Connect the two wires from the solar panel to the power input connection on the surge suppressor (Polarity does not matter). Sunlight will energize the batteries through the solar panel. This solar panel will charge up to 1000 Mamp/Hr in optimum conditions & 300 Mamp/Hr in light overcast conditions. For further details about Elite's solar panel, consult the “Solar 3” Installation sheet that is included with the solar panel.





**Do Not** use solar panel and plug-in transformer at the same time.

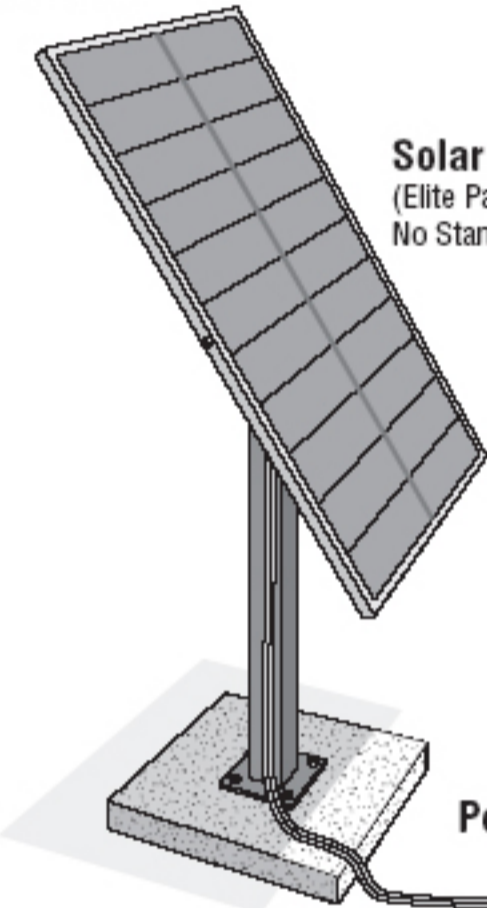

**Solar Panel**  
(Elite Part # **SOLAR 3**)  
No Stand


**Polarity Does Not Matter**

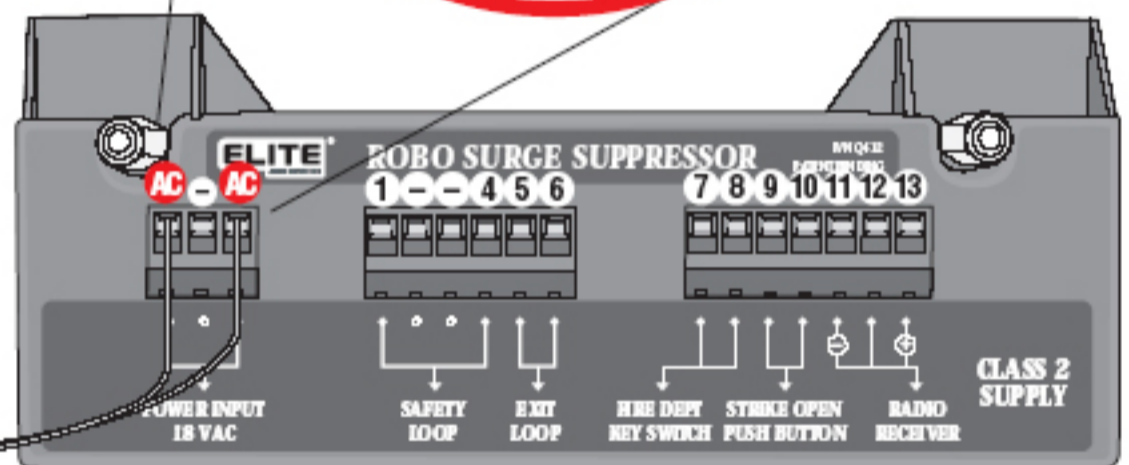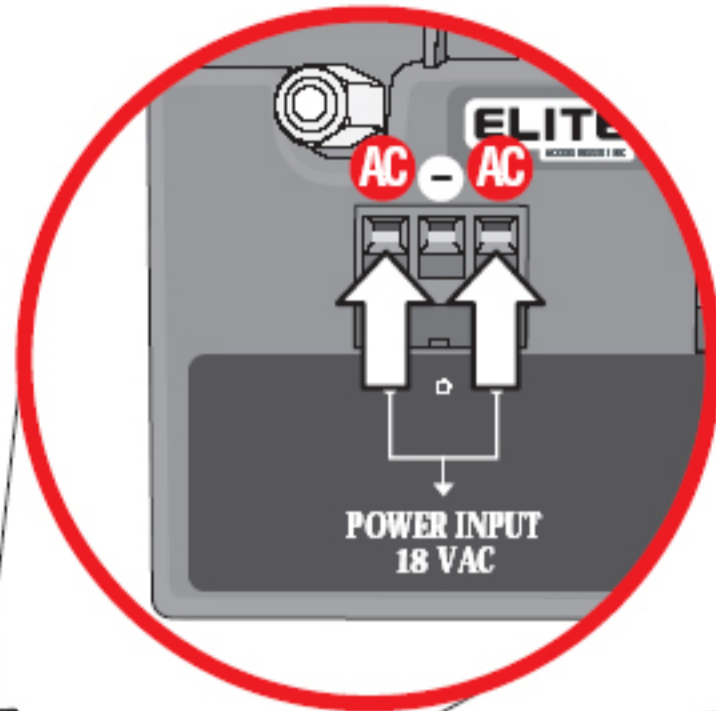

Energizing this operator with solar power only needs the radio receiver to operate the gate. The only recommended external devices other than radio receivers are dry-contact command devices which do not consume any current like key switches. **Using other devices that consume high current such as telephone access, magnetic locks or loop detectors will cause excess drainage of the battery and eventually completely drain the battery .**



Elite recommends using a larger battery (12 VDC, 30 Ahr) (Elite Part # **A 12330**) in this operator when using the optional solar panel.

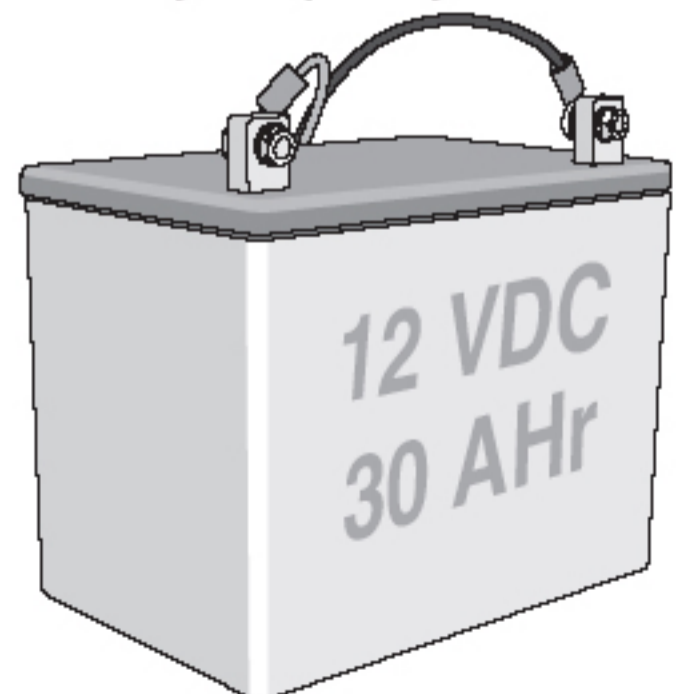

**For More Details,  
contact your Local Dealer**